 
 


Tools Required

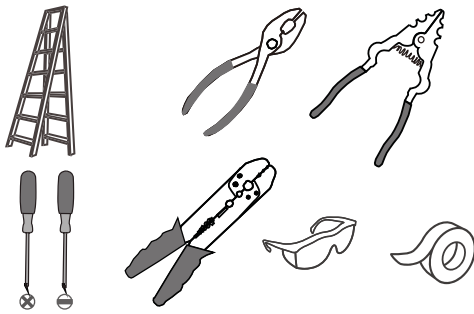

Light Source

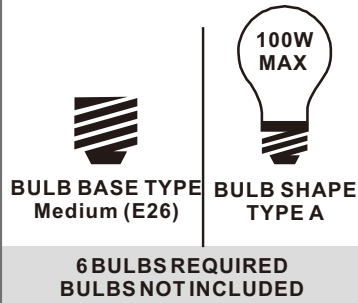

**Fixture Height Adjustable
28.5" to 124.5"**

Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

 
Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

PARTS BAG

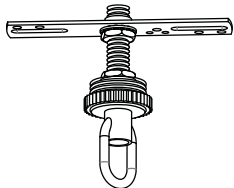


A Crossbar Assembly
x 1




B Outlet Box Screw
x 2



 C Wire Connector
x 3



D Quick Link
x 2

 


E Fixture Chain
x 1




F Ceiling Canopy
x 1

 G Fixture Loop Assembly
x 1

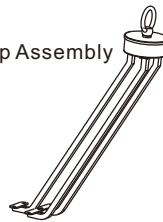

H Shade
x 6

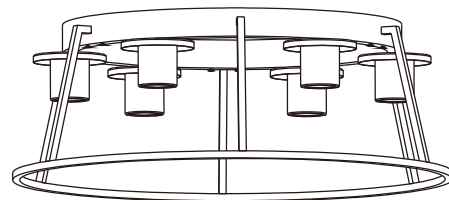 


I Fixture Body
x 1




Table of Contents

Fixture Loop	Crossbar Assembly	Fixture Chain	Wiring	Ceiling Canopy	Bulb
STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6

 STEP 1

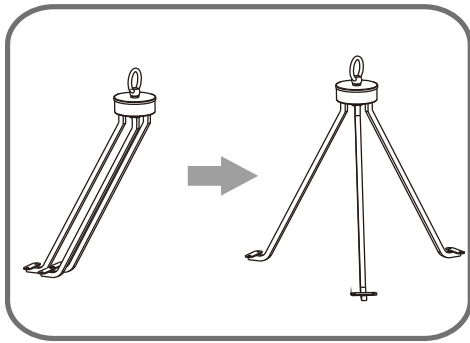


1 → 2

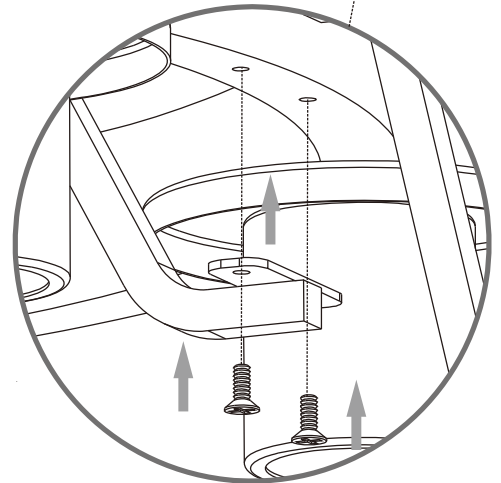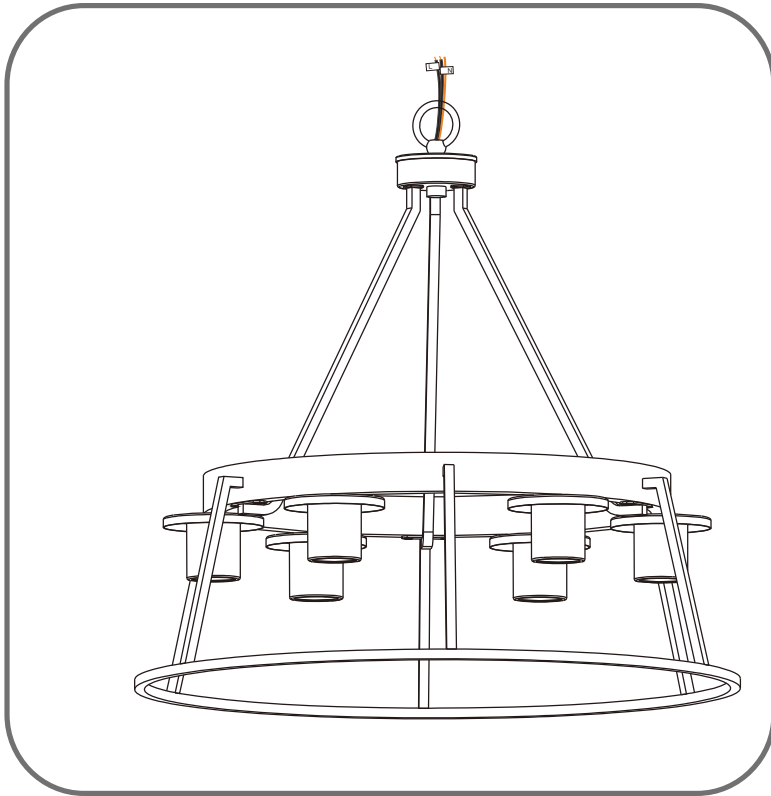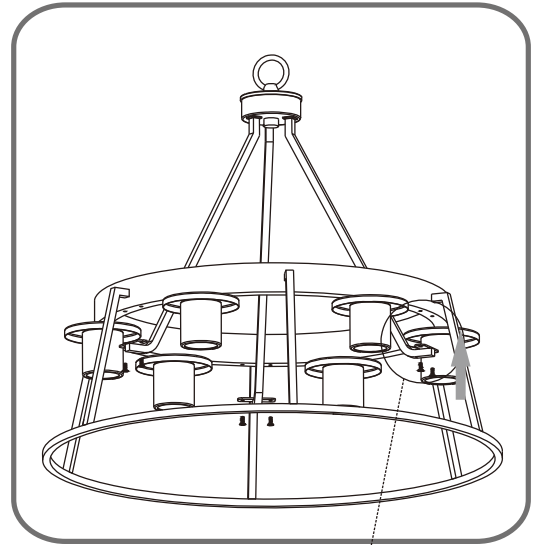   

STEP 2


1

 Step 1
Install crossbar assembly

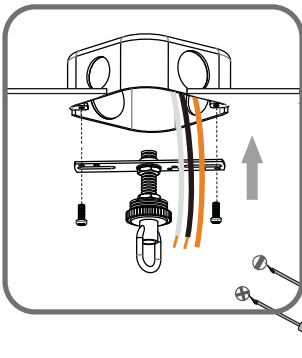


2

 Step 2 - 3
Test fitting ceiling canopy to nipple

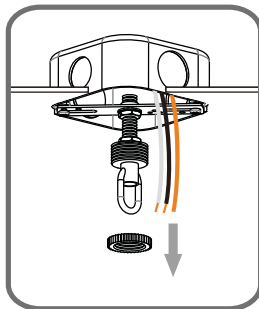


3

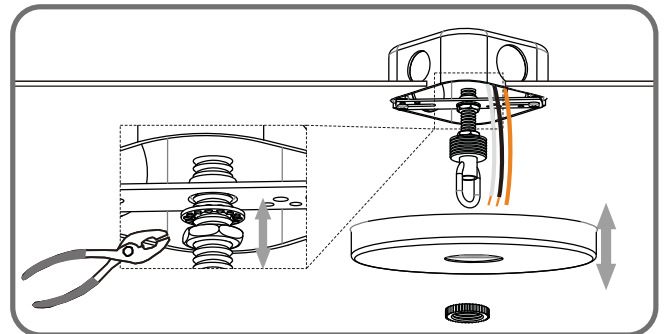 

STEP 3


1

 Step 1
Adjust fixture chain length

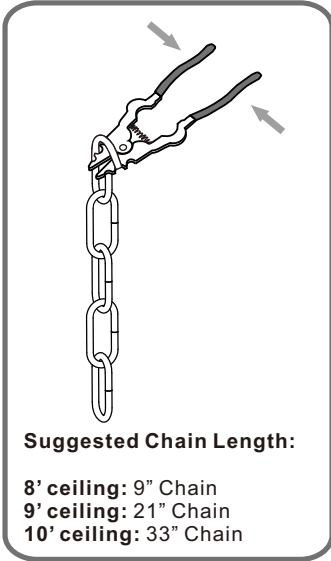


2

 Step 2 - 3
Install Fixture Chain

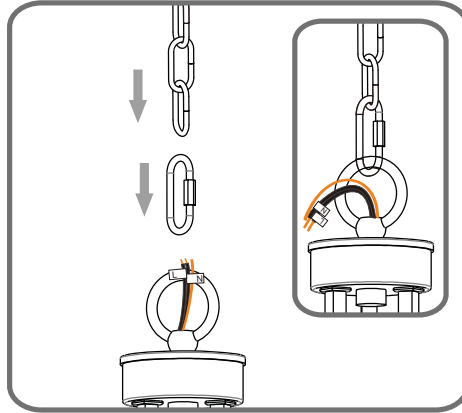


3

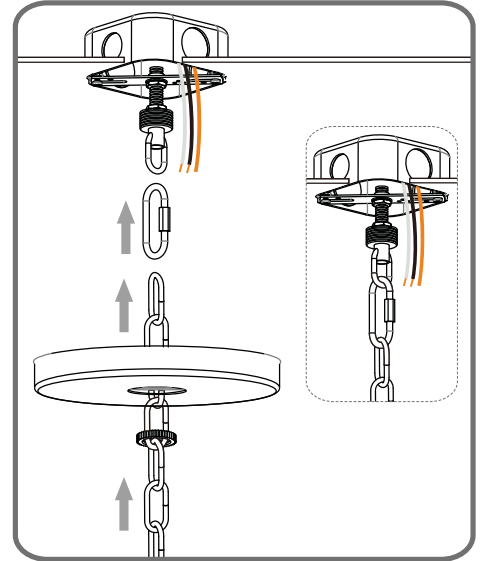 


STEP 4

1

 
Step 1
Feed the fixture wires through the loop

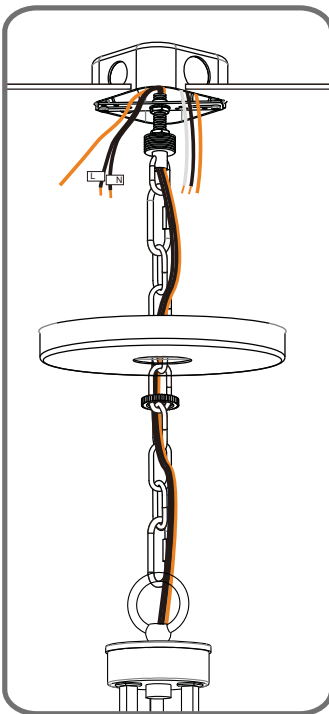

2

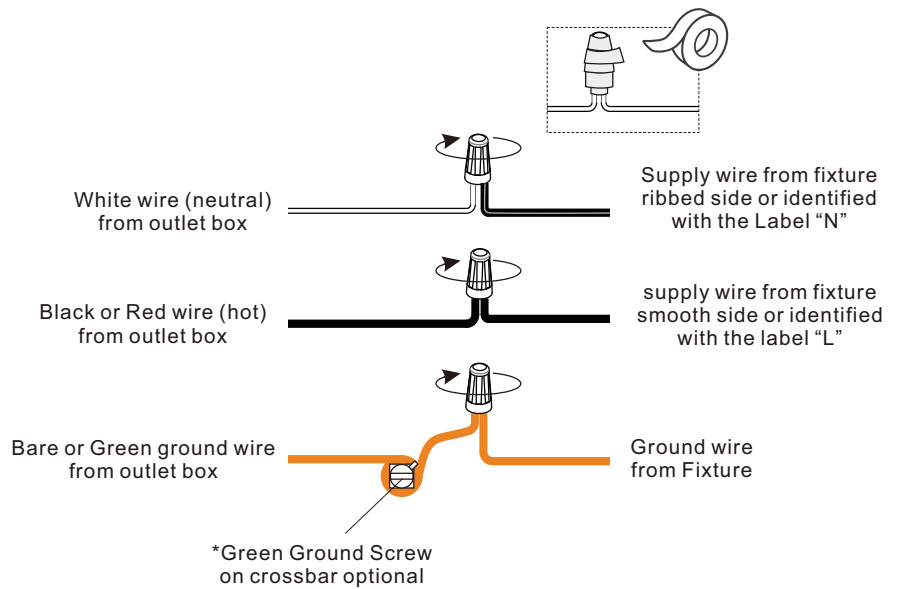 

 STEP 5

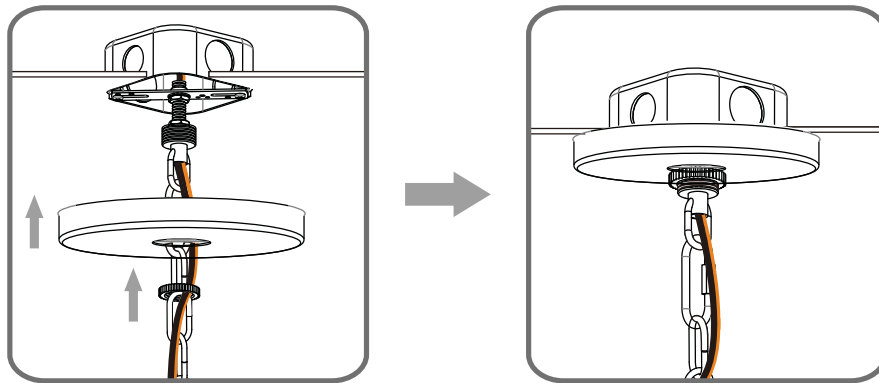

STEP 6

