

INSTALLATION GUIDE FOR PCRGL138MBK



SAFETY INFORMATION

Released Date: 2023-11-01

Please read and understand this entire manual before attempting to assemble, install or operate the product.

WARNING

• RISK OF ELECTRIC SHOCK - Before beginning installation, turn off electricity at the circuit breaker box or the main fuse box.

CAUTION

- For your safety, read instructions completely before beginning installation.
- If in doubt about electrical installation, consult a licensed electrician.

TOOLS REQUIRED










	Ratings	120Vac, 60Hz	
		Model No.	Wattage
		PCRGL138MBK	37W


CARE AND MAINTENANCE

 Wipe clean using soft, dry cloth or static duster. Always avoid using harsh chemicals and abrasives to clean fixture as they may damage the finish.

If you need further assistance call Quoizel Customer Care at 1-800-645-3184 (9:00am - 5:00pm EST), or visit us on-line at www.quoizel.com.

PACKAGE CONTENTS

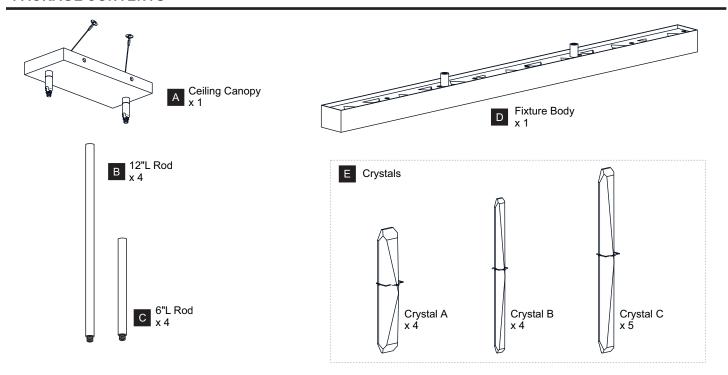

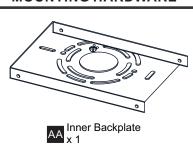







Mounting Screw x 4

CC Wire Connector

DD Outlet Box Screw














EE X 2 Wall Anchor


Washer


INSTALLATION

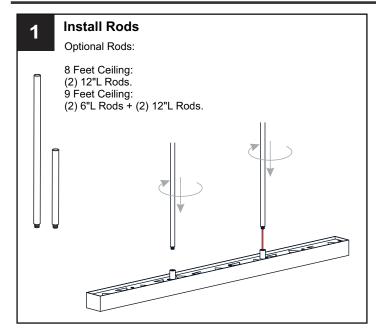


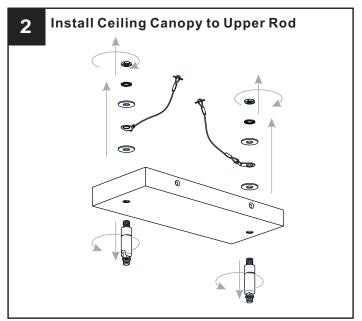


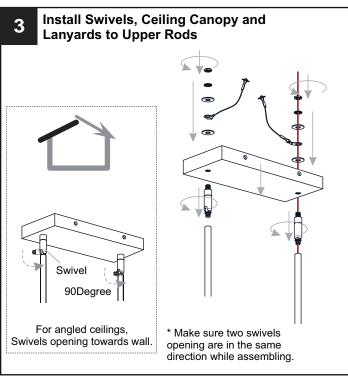


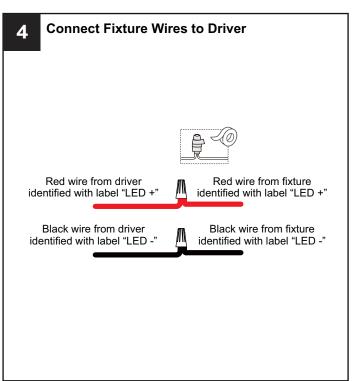


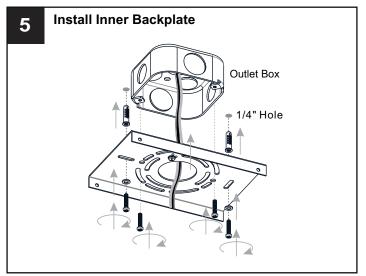

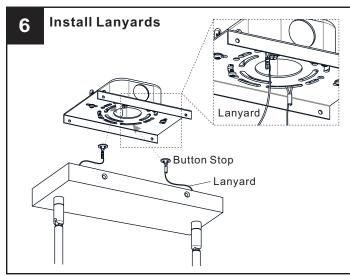

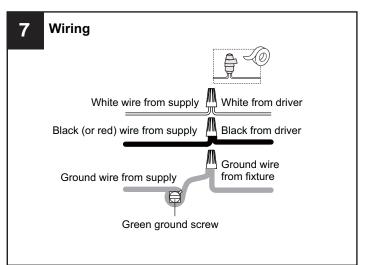

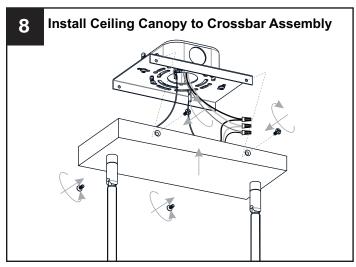

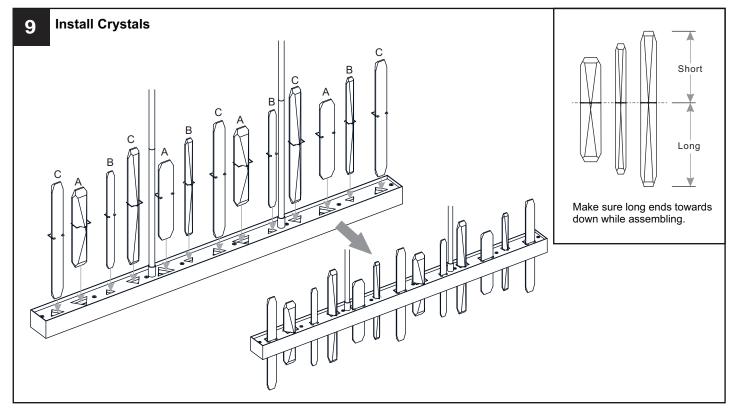

Your installation is now complete! Restore electricity and save this sheet for future reference.